

6.6 Setting holiday time

You can set the beginning (first day of holidays after departure) and the end (last day of holidays before arrival) of the holiday period on the heating controller.

During this holiday period, the heating circuit enters lowering mode, water heating and circulation are disabled and the Vacation operating mode is displayed.



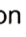

After the end of the holiday period set, the operating mode is reset to the mode originally set.




In systems with two heating circuits and a separate operating unit for the second heating circuit, water heating and circulation are only disabled during the holiday period if you also disable the second heating circuit via the operating mode or a holiday period setting.



The Vacation operating mode appears in the default display during the holiday period.




You can cancel the **holiday program by setting another operating mode** (e.g. automatic program 1).

How to set the holiday period:

1. Heating circ. configuration  Starting from the default display, press the  button to go into the main menu. Scroll through this menu using the  button until the **1. Heating circ. configuration** menu item appears. Press the  button to access the **1. Heating circ. configuration** submenu.

Vacation period configuration  Scroll through this menu using the  button until the **Vacation period configuration** menu item appears. Press the  button to access the **Vacation period configuration** submenu.

Vacation start
Su 26.09.05 The menu item which allows you to enter the start of the holiday (day after departure) is displayed. Press  or  to set the start of the holiday period.





Vacation end
Tu 12.10.05 Press  to scroll on to enter the end of the holiday period (day before the return). Press  or  to set the **end of the holiday**.




Press  to return to the Vacation period configuration menu item.



6.7 Resetting heating time programs




All heating time programs can be reset to the factory setting.

How to reset the heating time programs:

1. Heating circ. configuration  Starting from the default display, press the  button to go into the main menu. Scroll through this menu using the  button until the **1. Heating circ. configuration** menu item appears. Press the  button to access the **1. Heating circ. configuration** submenu.

Heating program Set to default  Use the  button to scroll to the **Heating program Set to default** menu item. Press the  button to access the submenu for **resetting the heating time programs**.

Select program Program 1 Select the heating time program you want to reset to the factory setting using the  or  buttons.

Set to default Program 1 No  Press  to scroll to the next item. You are prompted to confirm that you want to reset the corresponding time program to the standard settings. Press  to set this to **Yes**.